




<b>L-140F-TP</b>	
Brand Name	MAGNETIC-NPF
Ballast Type	Magnetic
Starting Method	Pre-Heat
Lamp Connection	Series
Input Voltage	120
Input Frequency	60 HZ
Status	Active

## Electrical Specifications

Lamp Type	Num. of Lamps	Rated Lamp Watts	Min. Start Temp (°F/C)	Input Current (Amps)	Input Power (Watts)	Ballast Factor	MAX THD %	Power Factor	Lamp Current Crest Factor	B.E.F.
CFS28W/GR8	1	28	50/10	0.70	39	0.95	15	0.46	1.5	2.45
* F30T12	1	30	50/10	0.73	41	0.95	10	0.47	1.5	2.30
F30T8	1	30	50/10	0.67	40	0.96	15	0.49	1.5	2.43
F40T12	1	40	50/10	0.65	41	0.79	15	0.52	1.5	1.94
FC12T9	1	32	50/10	0.75	40	0.91	10	0.45	1.5	2.24
FC16T9	1	40	50/10	0.59	39	0.90	15	0.55	1.5	2.32

## Wiring Diagram

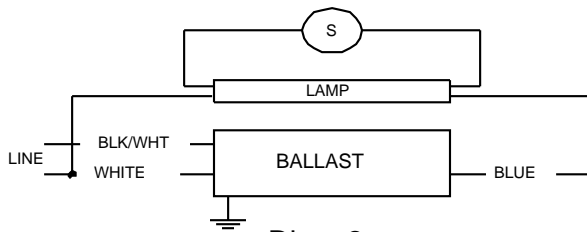


Diag. 2

The wiring diagram that appears above is for the lamp type denoted by the asterisk (\*)

## Standard Lead Length (inches)

	in.	cm.		in.	cm.
Black			Yellow/Blue		
White	43		Blue/White		
Blue	27		Brown		
Red			Orange		
Yellow			Orange/Black		
Gray			Black/White	14	
Violet			Red/White		

## Enclosure

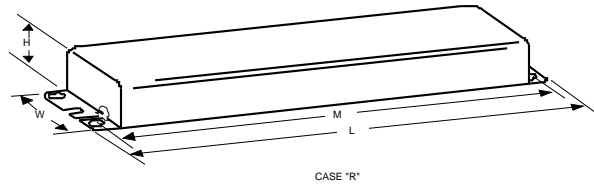

## Enclosure Dimensions

OverAll (L)	Width (W)	Height (H)	Mounting (M)
6.50 "	1.9375 "	1.375 "	6 "
6 1/2	1 15/16	1 3/8	6
16.5 cm	4.9 cm	3.5 cm	15.2 cm

Revised 06/29/1999



Data is based upon tests performed by Advance Transformer in a controlled environment and representative of relative performance. Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.

## ADVANCE

O'HARE INTERNATIONAL CENTER · 10275 WEST HIGGINS ROAD · ROSEMONT, IL 60018

Customer Support/Technical Service: Phone: 800-372-3331 · Fax: 630-307-3071

Corporate Offices: Phone: 800-322-2086